



Push Buttons



PBA1

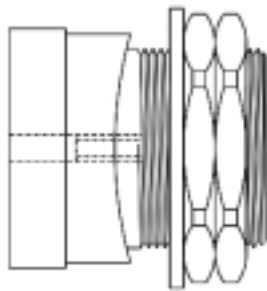

Hole plugs used when replacing push plate on round and square front fountains. (Included with PBA2 and PBA3)

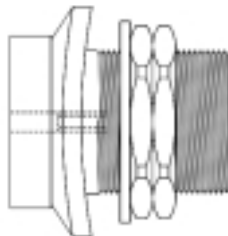

PBA3



PBA5



PBA1



PBA2



PBA3



PBA4

Push Button Assemblies

Used with push button valves 5871 and 5872, these push button assemblies are brass and include the push button with front adjusting screw, operator, brass locknuts, fiber washer and snap ring. Different drinking fountains use different push button assemblies. Refer to the table at the beginning of this manual to determine the correct push button assembly for the fountain.

Model PBA1

Polished chrome plated push button assembly used on round front sculpted bowl series.

Model PBA1HPB

High polished brass push button assembly used on MGF (mirror gold finished) round front sculpted bowl series.

Model PBA2

Polished chrome plated push button assembly used on straight front stainless steel fountains. Also includes hole plugs to use on fountain when replacing a push plate.

Model PBA2HPB

High polished brass push button assembly used on MGF (mirror gold finished) straight front fountains.

Model PBA3

Polished chrome plated push button assembly used on round front stainless steel fountains. Also includes hole plugs to use on fountain when replacing a push plate.

Model PBA4

Polished chrome plated push button assembly used on fountains with recessed push buttons.

Model PBA5

Polished chrome plated push button assembly used on fountains with a wall thickness of more than 5/8" thick.